

# CONVECTION SPACEHEATER



## IMPORTANT INSTRUCTIONS

Basic safety precautions should always be followed to reduce the risk of electric shock, fire or injury to persons. Carefully follow all application and safety instructions as per the information provided with this product.

### PLEASE READ AND SAVE THE INSTRUCTION MANUAL FOR FUTURE USE

**This heater requires no installation and shall be used only as a source for temporary heat.**

Before plugging the heater into the outlet, ensure by visual inspection that the unit is intact and has not suffered any damage during transit.

Ensure heater is placed on a flat stable surface.

**NOTE:** To prevent overloading circuit, avoid plugging the heater into a circuit that is serving other electrical needs.

### Overheat Protection

If the heater grill is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off.

To reset the heater, simply turn power off and unplug heater for 10 minutes until it cools down, then you may plug heater in and restart.

### Safety Tip-Over Protection

Heater has a safety tip-over switch to turn power off should the heater tip over.

To resume heater function, simply place heater back in its upright position.

## ⚠ WARNING

### HOT SURFACES

Do not touch body of heater when in use. Heater becomes hot when in use. Use handle when moving this heater.

### FIRE HAZARD

Do not use near combustible materials or flammable gases or sources of heat.

Do not use in areas where gasoline, paint or flammable materials are used or stored.

Keep combustible materials such as pillows, bedding, curtains, clothes, paper or furniture at least 0.9m (3') from the sides and rear of heater.

To prevent risk of fire, do not block air intakes or exhaust in any manner or allow foreign objects to enter any ventilation or exhaust opening.

## OPERATING INSTRUCTIONS

Place heater in area of room that is coldest. Plug heater directly into 15A-120V outlet.

### Power Indicator Light

The RED power indicator light will illuminate to tell you the heater is turned ON.

### Turning Heater ON

Turn the thermostat knob in a clockwise direction until it reaches the maximum setting.

**NOTE:** During the heater's initial use, you may experience a slight odor or some smoke. This is a result of the coating applied to the heating element "burning off". This is normal and will go away after a few minutes of use.

### Power Level Control

The heater has 2 heat settings: HIGH (Setting "II") and LOW (Setting "I").

Use the HIGH setting (1500W) for full power to raise the temperature quickly.

Use the LOW setting (750W) at reduced power when the desired temperature is reached.

### Setting Thermostat

After heater has reached the desired temperature, slowly rotate the Thermostat Control counter-clockwise until the heater shuts off (you should hear a faint "click").

By leaving the thermostat at this setting it will automatically maintain this temperature.

To lower temperature, rotate the control further counter-clockwise.

To raise temperature, rotate the control further clockwise.

### Turning Heater OFF

Turn the Power Level Control to the OFF position (Setting "0") before unplugging or plugging in the heater. Be sure to unplug the heater when not in use.

## CARE & MAINTENANCE

- Before attempting to clean heater, be sure to disconnect power cord and allow the heater to cool completely.
- Clean the outside surface with a clean damp cloth.

**DO NOT IMMERSE THE HEATER IN WATER.**

- Allow heater to dry completely before use.
- Do not use the heater if it has malfunctioned or become damaged in any way.

## STORAGE

Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.

## WARRANTY

**Electrimart warrants this product to be free from defects in material and workmanship for a period of 1 year from date of purchase. Warranty obligations are limited to replacing the product. We are not responsible for any other loss or damage which may arise through use of this product. Warranty is void if product has been tampered with or if damage is due to misuse or abuse.**