

WORKSHOP SPACEHEATER



IMPORTANT INSTRUCTIONS

Basic safety precautions should always be followed to reduce the risk of electric shock, fire or injury to persons. Carefully follow all application and safety instructions as per the information provided with this product.

INTENDED USE

This product is intended for indoor residential and office use only - not for industrial or other commercial applications.

USE AS A TEMPORARY SOURCE OF HEAT

Do not use as a source of permanent heating.

Running heater constantly can risk premature deterioration and/or failure.

GIVE HEATERS THEIR SPACE

Position a portable space heater at least 3 ft. away from furniture, window treatments, bedding, clothing, rugs, and other combustibles. These items could easily catch fire if they come into contact with the unit's electric heating element

Never sit or drape anything on top of the heater. In addition, be sure that the heater is placed on a hard, level surface that is non-flammable.

PLUG HEATER DIRECTLY INTO AN OUTLET

Portable electric heaters should be plugged directly into an outlet whose circuit has sufficient power capacity.

Attaching an extension cord to the unit increases the chance of overheating, fires, and electrical shock injuries.

If an extension cord must be used, it must be 14 AWG or larger and rated no less than 1875 watts.

Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like.

Arrange cord away from traffic area where it will not be tripped over.

SHUT OFF AND UNPLUG HEATER WHEN LEAVING IT UNATTENDED

Upon leaving an area, turn off the portable heater and unplug it.

Do this when you go to sleep as well, but make sure you have an adequate and safe heating alternative if need be.

Use of extreme caution is necessary when any heater is used by or near children, disabled persons or pets.

⚠ WARNING

HOT SURFACES

Do not touch body of heater when in use. Heater becomes hot when in use. Use handle when moving this heater.

FIRE HAZARD

Do not use near combustible materials or flammable gases or sources of heat.

Do not use in areas where gasoline, paint or flammable materials are used or stored.

Keep combustible materials such as pillows, bedding, curtains, clothes, paper or furniture at least 0.9m (3') from the sides and rear of heater. To prevent risk of fire, do not block air intakes or exhaust in any manner or allow foreign objects to enter any ventilation or exhaust opening.

KEEP HEATER AWAY FROM WATER AND OUT OF DAMP LOCATIONS

This product is not to be used in bathrooms, laundry areas or other similar damp locations.

Never locate heater where it may come into direct contact with water (bath tubs, sinks, water containers, etc.).

Do not touch the heater if you are wet or have wet hands, as this increases the risk of electrical shock.

INSPECT AND CLEAN HEATER REGULARLY

Portable heaters should be inspected on an annual basis and cleaned frequently to ensure that they are in safe working condition.

Seek out a qualified worker to perform any repairs. Never use a defective heater.

HEATER OPERATION

Always operate heater in an upright position following all application and safety instructions.

Place heater in area of room that is coldest. Plug heater directly into 15A-120V outlet.

NOTE: To prevent overloading circuit, avoid plugging the heater into a circuit that is serving other electrical needs.

Power Indicator Light

The red power indicator light will illuminate to tell you the heater or fan is turned ON.

Turning Heater ON

To start the heater, turn the ON/OFF Power Level Control from the OFF position to the FAN, LOW HEAT or HIGH HEAT setting.

Rotate the Thermostat Control clockwise to the HIGH thermostat position (as described below).

NOTE: During the heaters initial use, you may experience a slight odor or smoking. This is the result of the heating element lubrication "burning off". This is normal and will go away after a few minutes of use.

Setting Thermostat

After heater has been turned on and room has reached the desired temperature, slowly rotate the Thermostat Control counter-clockwise until the heater shuts off.

By leaving the thermostat at this setting, it will automatically maintain this temperature.

To lower temperature, rotate the control further counter-clockwise.

To raise temperature, rotate the control further clockwise.

Power Level Control

The heater has 2 heat settings: HIGH and LOW.


Use the HIGH setting (1500W) to raise the temperature quickly.

Use the LOW setting (1300W) when the desired temperature is reached.

Activating Anti-Freeze Setting


When activating the anti-freeze setting, the unit will operate automatically when the surrounding temperature reaches close to freezing. To engage this function, set the thermostat on and the heat switch to 1500W. Operation will continue until the surrounding temperature increases.

Turning Heater OFF

Turn the Power Level Switch to the OFF position  before unplugging or plugging in the heater.

Be sure to unplug the heater when not in use.

To Operate FAN Only

Turn the ON/OFF Power Level Control to the FAN setting. 

Turn Thermostat Control fully clockwise so fan will run continuously.

Overheat Protection

If the heater grill is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off.

To reset the heater, simply turn power off and unplug heater for 10 minutes until it cools down, then you may plug heater in and restart.

Safety Tip-Over Protection

Heater has a safety tip-over switch to turn power off should the heater tip over.

To resume heater function, simply stand heater back upright.

ASSEMBLY INSTRUCTIONS

Attach the handle to the top of the heater with the two screws provided using a screwdriver (not included).

CARE & MAINTENANCE

Before attempting to clean heater, be sure to disconnect power cord and allow the heater to cool completely.

Clean the outside surface with a clean damp cloth.

DO NOT IMMERSE THE HEATER IN WATER.

Allow heater to dry completely before use.

Do not use the heater if it has malfunctioned or become damaged in any way.

STORAGE

Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.

WARRANTY

Electrimart warrants this product to be free from defects in material and workmanship for a period of 1 year from date of purchase. Warranty obligations are limited to replacing the product. We are not responsible for any other loss or damage which may arise through use of this product. Warranty is void if product has been tampered with or if damage is due to misuse or abuse.