



### IMPORTANT: Read all instructions carefully to ensure safety and proper installation.

- The fixture is designed for 100-277V AC, 60Hz application.
- This fixture is not designed to be mounted on the ground. It is intended to be wall-mounted at a height of 1.2m (4 feet) or higher.
- Not to be used with dimmers or timers.
- Approved for outdoor applications – Wet location certified.
- Use only with copper or copper-clad wire.
- Install in accordance with all appropriate electrical codes and requirements.

## INSTALLATION GUIDE

**WARNING: Before undertaking any work on the circuit always turn power OFF at the panel by switching circuit breaker to OFF or by removing the fuse.**

- 1 Remove the 4 screws on the front of the wall pack to remove the upper cover (driver box).

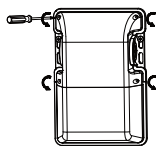


Figure 1

- 2 Unplug the male and female connectors to remove the driver box from the fixture.

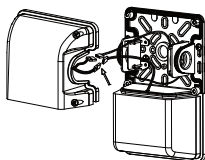


Figure 2

- 3 With the back plate of the wall pack now exposed, determine which holes in the back plate need to be drilled out in order to align with the mounting holes in the existing wall box, then drill these holes out.

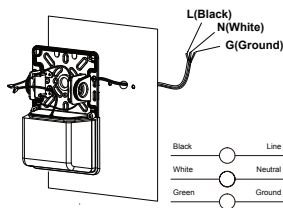


Figure 3

- 4 Make wiring connections from wall pack to power wires in the junction box as follows:

Connect the **GREEN** fixture ground wire to the **BARE** or **GREEN** copper ground wire from the junction box using the wire connector supplied.

Connect the **WHITE** fixture wire to the **WHITE** wire from the junction box using the wire connector supplied.

Connect the **BLACK** fixture wire to the **BLACK** wire from the junction box using the wire connector supplied.

- 5 Carefully tuck wires/connectors back through centre knockout into junction box.

- 6 Attach fixture to wall junction box by lining up holes (as in Step 3) in back plate with mounting holes in box. Tighten to ensure fixture is secure to wall.

- 7 Reconnect the male and female connectors (from Step 2).

- 8 Attach the cover of the wall pack with the 4 screws previously removed (from Step 1).

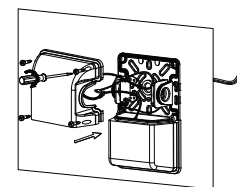


Figure 4

- 9 Turn power back on to check that wall pack is operational.

## SETTING WATTAGE, COLOUR & PHOTO SENSOR FUNCTIONS

1. Unscrew the cap on side of wall pack to access settings as shown in Figure 5.
2. To select desired Wattage, Colour and whether you wish Photo Sensor to be operational or not, follow the guide in Figure 6.
3. Once selections are made, cap **must** be screwed back.

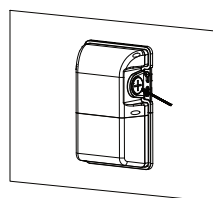


Figure 5

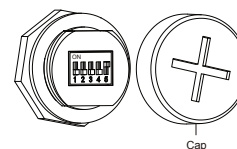


Figure 6

