

ELECTRIMART

SURFACE MOUNT

LED

WRAPLIGHT

MODEL: 80064

PLEASE READ SAFETY INFORMATION AND INSTRUCTIONS CAREFULLY BEFORE INSTALLING FIXTURE

1. WARNING: RISK OF SHOCK

This fixture is designed for use in a 115-125V, 60Hz circuit. Household electrical current can cause shock or serious injury unless handled properly.

For your safety, remember to:

- Turn off power at the fuse or circuit breaker box before installing fixture.
- Ground the fixture to avoid potential electric shock and to ensure reliable starting.
- Check all wiring connections to be sure they are tight and correct.
- Be careful not to damage or cut the wire insulation during installation.

Fixture must also be installed in accordance with local electrical codes. If unsure about your wiring, consult a qualified electrician.

WARNING:

TO AVOID THE RISK OF FIRE OR ELECTRIC SHOCK, THIS PRODUCT SHOULD BE INSTALLED, INSPECTED AND MAINTAINED BY A QUALIFIED ELECTRICIAN ONLY. INSTALLATION SHOULD BE COMPLETED BY AN INDIVIDUAL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE FIXTURE. INSTALLATION OF FIXTURE MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL BUILDING AND ELECTRICAL CODES.

2. WARNING: RISK OF CUTS

This fixture may have metal parts with sharp edges. Please handle with care.

3. IF USING WITH A DIMMER

This fixture can be dimmed if wired to a special 0-10V dimmer. For dimming installation, this fixture has additional Grey and Purple conductors.

To wire properly, please follow wiring instructions that come with the 0-10V dimmer.

If you do not plan to dim this fixture, follow the normal wiring directions. Since the Grey and Purple conductors will not be required, we recommend that you cap these using a wire connector or tape their exposed ends.


WARRANTY

Electrimart warrants the product to be free from defects in material and workmanship for a period of 1 year from date of purchase. Warranty obligations are limited to replacing the product. We are not responsible for any other loss or damage which may arise through use or installation of this product. Warranty is void if damage is due to misuse or abuse. To contact us, please send email to info@electrimart.com

FIXTURE INSTALLATION INSTRUCTIONS

1 REMOVE LENS FROM HOUSING

Press the suction cup (included) onto lens near either end of the fixture. Then, pull on suction cup to remove lens from the fixture. (Fig. 1A)

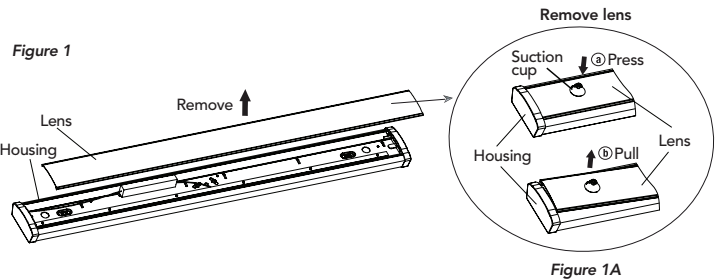

2 WIRING PREPARATION

Remove the desired knockout in back of fixture body.


3 PREPARATION FOR INSTALLATION OF FIXTURE

Using the fixture as a template, place it over the junction box and mark the 4 mounting holes.

Put the fixture aside and drill 4 pilot holes where the ceiling was marked. Insert drywall anchors (not included) into each hole.

4 WIRING & MOUNTING FIXTURE TO CEILING

Pass the power supply wires from ceiling box through knockout in fixture. Holding the fixture to ceiling so the four pilot holes line up with the pre drilled holes in the fixture, screw the 4 mounting screws (not included) into each drywall anchor, securing fixture in place (Fig. 2).

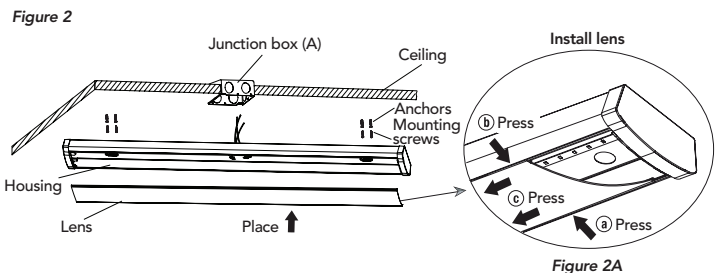

5 REINSTALLING LENS & POWER ON

Starting at one end of the housing insert lens slot onto edge of housing and carefully squeeze the lens to engage opposite side with housing. Continue this action down the length of the lens until fully installed onto housing (Fig. 2A). Installation is now complete.

Turn power back on at panel and switch fixture on.