

ELECTRIMART
LED
SHOPLIGHT
 MODEL: 80065

INSTRUCTIONS

Do not use in wet locations.
 Do not attempt to install while fixture is plugged into power outlet.
 Select suitable location that can support the weight of the fixture.
 Determine method of mounting before drilling. (i.e. drywall or wood mounting)

1 MOUNTING FIXTURE

Once location of Shoplight is determined, mark two (2) spots on the ceiling 45⁷/₈" (116.5 cm) apart for mounting hardware installation.

a) Drywall Mounting:

Drill 1/4" pilot holes in the ceiling on the 2 marked spots to insert 2 drywall anchors. (provided)
 Insert drywall anchor into each pilot hole.


On the wire assemblies, unscrew the top caps from the larger ends.

Using the 2 smaller screws supplied, insert each screw into top cap making sure threaded end of cap is facing down (away from ceiling).

Tighten screw into plastic anchors so top cap is flush with ceiling.

Repeat this step for the 2nd assembly.

Screw the larger ends of each wire assembly back onto the top caps that are now secured to the ceiling.

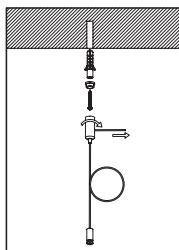

b) Wood Mounting:


Drill 1/16" diameter pilot holes into the wood ceiling on the 2 marked spots.

Using the longer/larger screws supplied, insert screw into top cap (screw will sit on outer edge of top cap) making sure threaded end of cap is facing down (away from ceiling).

Tighten screw into plastic anchor so top cap is flush with ceiling.

Repeat this step for the 2nd assembly.


Screw the larger ends of each wire assembly back onto the top caps that are now secured to the ceiling.

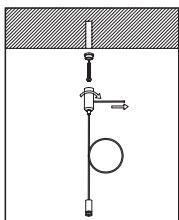

2 ADJUSTING HEIGHT OF FIXTURE

Before hanging shoplight, determine and adjust height of fixture by lengthening or shortening wire in the following manner:


Press down plunger on larger end of each wire assembly (now attached to the top cap on ceiling) and pull/push cable until desired height is reached. Excess wire may be cut off.

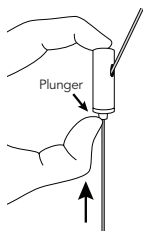

3 ATTACHING FIXTURE TO WIRE ASSEMBLIES

Install small recessed ends of each wire assembly into the cutouts on top of the fixture body.


Slide into narrower channel of cutout to secure in place. Weight of hanging fixture will hold in place.

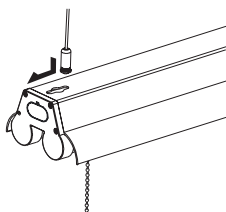

4 CONNECTING POWER CORD


After installation, plug the power cord (B) into end of fixture and then plug-into power outlet.

Ready to use, the Pull Chain (C) turns fixture On and Off.

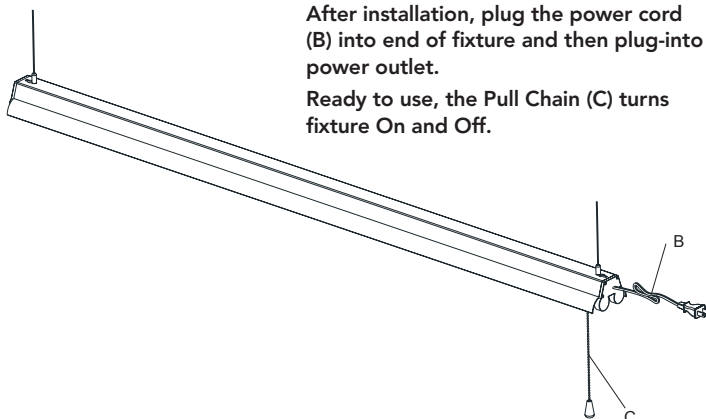

5 CONNECTING FIXTURES IN SERIES

Up to 8 fixtures can be connected together (linked) using the end connector (D).

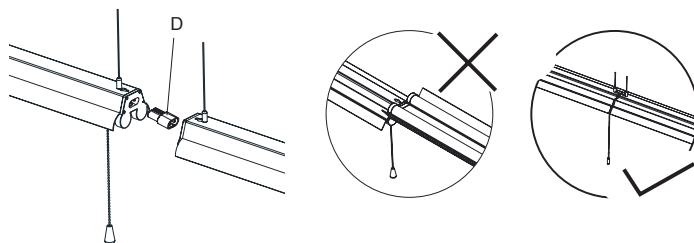

CARE & CLEANING

Your fixture is made from quality materials that will last many years with minimum care. Should periodically cleaning the diffuser or interior of fixture be required, make sure to disconnect power by unplugging fixture from outlet.

DO NOT use solvents or cleaners containing abrasive agents.

Make sure not to spray liquid cleaner directly onto the LEDs, LED driver or wiring.

WARRANTY

Electrimart warrants the product to be free from defects in material and workmanship for a period of 1 year from date of purchase.

Warranty obligations are limited to replacing the product.

We are not responsible for any other loss or damage which may arise through use or installation of this product.

Warranty is void if damage is due to misuse or abuse.

To contact us, please send email to info@electrimart.com



Pointe Claire, QC
 H9R 4N9